




For use on doors 1-3/8"-1-3/4" thick with 2-1/8" bore hole. 2-3/8" or 2-3/4" backset depending on configuration.

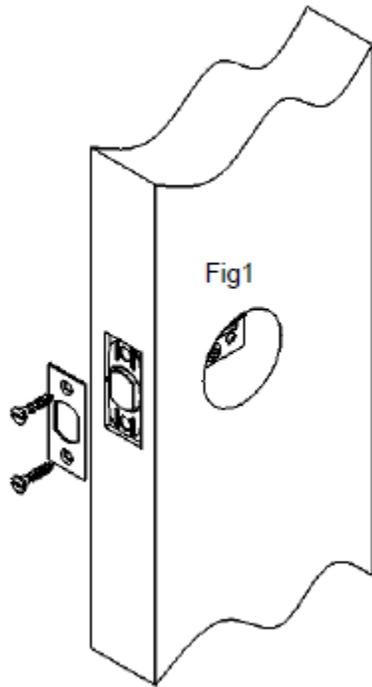

Step 1
Install the latch bolt. Fig 1

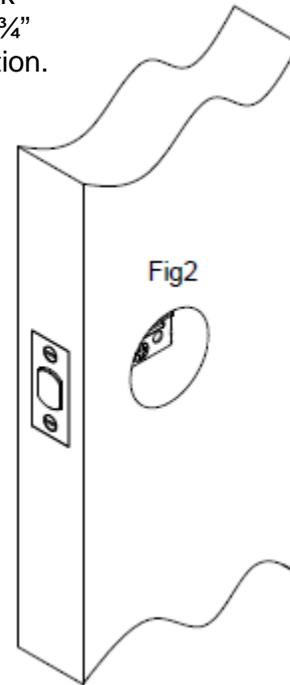

Step 2
Place exterior trim mounting plate onto the door. Fig 2

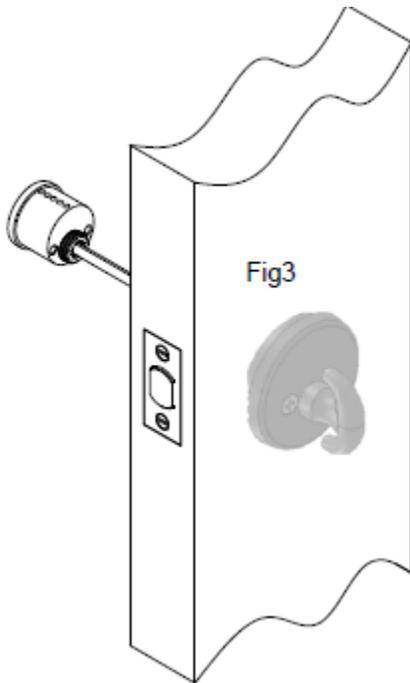

Step 3
Install the cylinder, making sure the tailpiece is in the vertical position as shown in Fig 3. Secure interior trim with provided screws.