

Fixtures with Slip-Type Canopies

skill level 🔸 basic electrician

installation instructions

For a safe installation make sure that the electrical box is securely mounted to a structural member of the building.



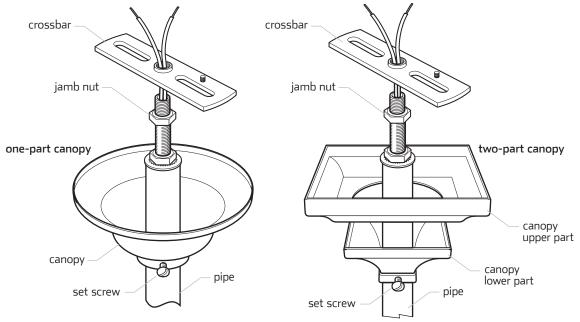

- 1. Attach crossbar to electrical box using screws supplied with the box.
- 2. Loosen set screw on canopy and slip canopy down pipe, carefully to avoid scratching the finish.
- 3. Screw jamb nut approximately 1/2" down threaded pipe.
- 4. Slip wires through hole in crossbar and screw the fixture into the crossbar, turning clockwise.
 - * Make sure the wires turn with the fixture and do not become twisted.
- 5. When fixture is correctly positioned, tighten jamb nut securely against crossbar.
- 6. Make wiring connections in accordance with local electrical codes. See "Important Information" on reverse side.
- 7. Carefully slide canopy up against ceiling and tighten set screw to secure it. If installing a two-part canopy, make sure the two pieces are aligned with each other before tightening the set screw.


Complete!


REJUVENATION°

installation instructions



- 1. Remove crossbar from assembly and attach crossbar to electrical box.
- 2. Loosen collar and slide it, along with canopy and fixture assembly down central rod.
- 3. Feed wires through center hole of crossbar.
- 4. Screw threaded pipe loosely into crossbar.
- 5. Check fit of canopy by placing it snug against ceiling. Adjust depth of assembly so that collar fitting extends beyond bottom of canopy by 1/4".

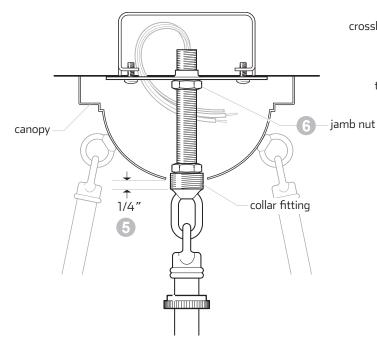

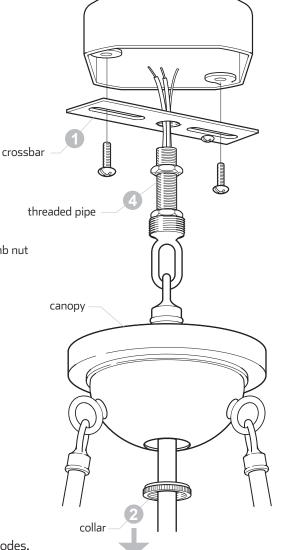

- 6. Tighten jamb nut upward against crossbar to lock assembly in position.
- 7. Make wiring connections in accordance with local electrical codes. See "Important Information" on reverse side.
- 8. Slide canopy and fixture assembly up against ceiling and secure with collar.

Complete!

REJUVENATION